


-THE-
BOSS

EASIER BRANCH WORK

*Patent Pending

- 1** Drill the hole in the desired location. Use a 2½" hole saw.

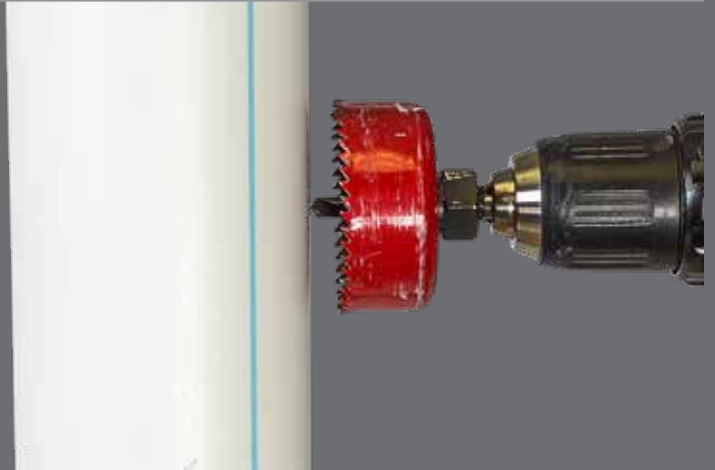

- 2** Apply heavy-bodied PVC solvent cement to the inner facing of the fitting and pipe, as well as the lip of the pipe where The Boss will sit.



- 3** Set The Boss in place, holding the fitting tight against the pipe for sixty seconds.



The Boss Works great on plumbing stacks and horizontal drain lines.

The unique design of The Boss creates a permanent disruption-free waste entrance into the main drain.

1½" & 2"
branch outlets



vertical applications

Tee & Wye
configurations



horizontal applications

