


Choice
Lattice
By Genova

Use common tools,
rust-resistant screws & washers.


H-Channel

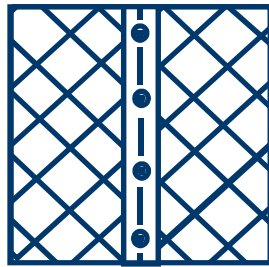


SECURING LATTICE TOGETHER

Use H-Channel to join two or more sheets of Lattice. Pre-drill oversized holes through the middle of the H-Channel for the screws. Allow a 1/4" gap between the edge of the Lattice and the bottom of the H-Channel slot, for expansion and contraction.

U-Channel

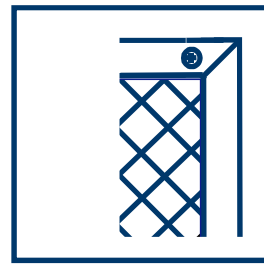

U-Channel

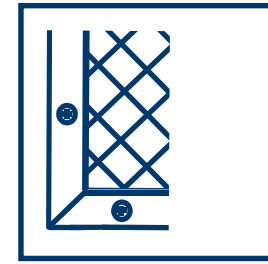

SECURING TOP, SIDES & BOTTOM

Use U-Channel to secure the top, sides and bottom. Pre-drill oversized holes through the U-Channel and Lattice every 2' - 3'. Allow a 1/4" gap between the edge of the Lattice and the bottom of the U-Channel slot, for expansion and contraction.

Do NOT PAINT OR STAIN • Do NOT OVER TIGHTEN SCREWS
PRODUCT TO BE USED FOR DECORATIVE PURPOSES ONLY

Form# 265417 5/07

www.genovaproducts.com